



10. temporary crown



11. temporary crown



12. endo



13. use UNIC® reamer through UNIC® core hole to open canal and calibrate



14. UNIC® post



15. try UNIC® post for fit

Images courtesy of Dr. Bois



16. use SHOTBOND® to optimize bonding



17. CORPOSIT® in canal through UNIC® core hole




18. insert UNIC® post and light cure



19. trim post, finished work

Diametrical Tensile Strength (Mpa)

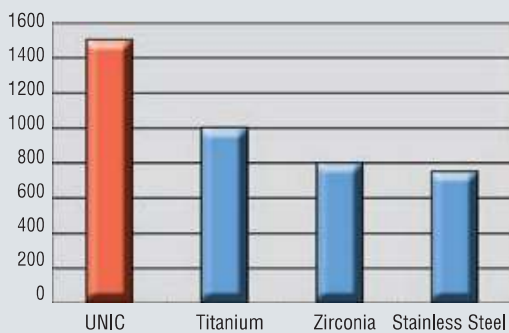

Young's Modulus of Elasticity (Gpa)

