




RUBBER DAM CLAMPS

A complete line of Satin Steel® Rubber Dam clamps for anterior, premolar and molar applications.


ANTERIOR



00

| RDCM00


Flat jaws and high bow for small lower canines and first premolars.



6

| RDCM6


Slightly offset jaws for labial caries on anterior teeth.



9

| RDCM9


Offset flat jaws and stiff bow for anterior teeth.



9S

| RDCM9S


Offset flat serrated jaws for anterior teeth.



212

| RDCM212


Flat jaws for labial caries on anterior teeth.




212SA

| RDCM212SA

Slightly offset staggered jaws for odd shaped anteriors.

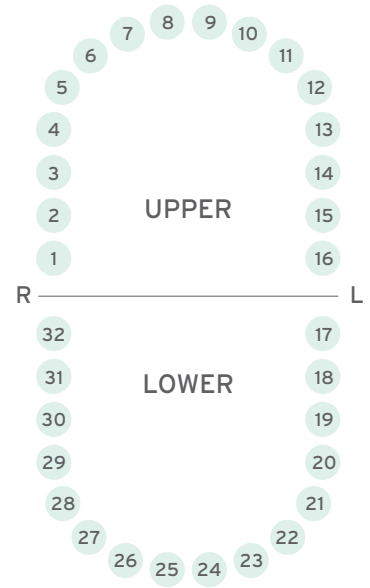


PREMOLARS



0

| RDCM0


Flat jaws and high bow for longer premolars.



1

| RDCM1

Slightly festooned jaws for upper premolars.



1A

| RDCM1A


Deeply festooned jaws for canines and premolars.



2

| RDCM2


Flat jaws for premolars.



2A

| RDCM2A


Flat jaws for larger premolars.



2AS

| RDCM2AS


Flat serrated jaws for larger premolars.



W2

| RDCMW2


Flat jaws for premolars.



27N

| RDCM27N


Slightly festooned jaws for premolars.



29

| RDCM29

Flat jaws for lower premolars.



209

| RDCM209

Small, flat jaws with stiff bow for lower premolars.

